

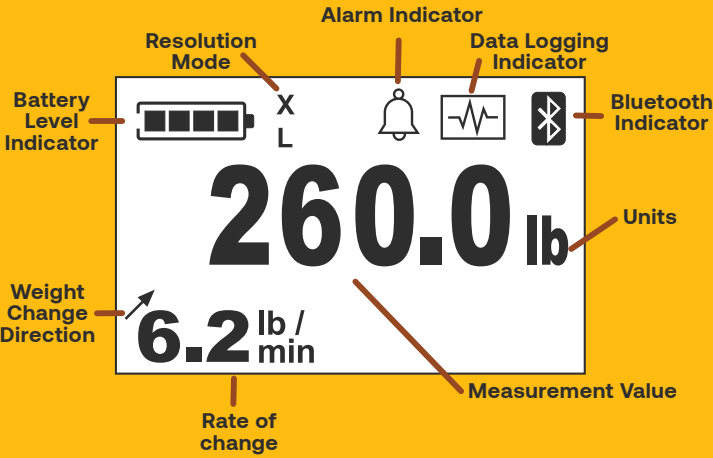


# WS260






PRECISION SCALE™

Recovery

Digital Measurement



## Controls

Function		 	 
	MENU	HOLD FOR UNITS	TARE
<b>Press</b>	- Menu - Select Menu Item	- Backlight - Up Key	- Tare - Down Key
<b>Long* Press</b>	- Power off	- Units Menu	- Zero

\*Long Press - when the button is pressed for 2 seconds or more

Learn More about the  
WS260 At  
[www.AppionTools.com/WS260](http://www.AppionTools.com/WS260)

 CAUTION

Refrigerant recovery cylinders can only be filled to 80% of maximum capacity per DOT Regulations. Refer to page# 4 in the owners manual for additional information.

**Tare** - Use to reset the reading **and** account for container weight  
**Zero** - Use to clear the reading **and** store the weight of an empty platform

Visit [www.AppionTools.com/Manuals](http://www.AppionTools.com/Manuals) to download the entire Owners manual